


Town of Falmouth

Mailbox Design meeting Town Ordinance Requirements

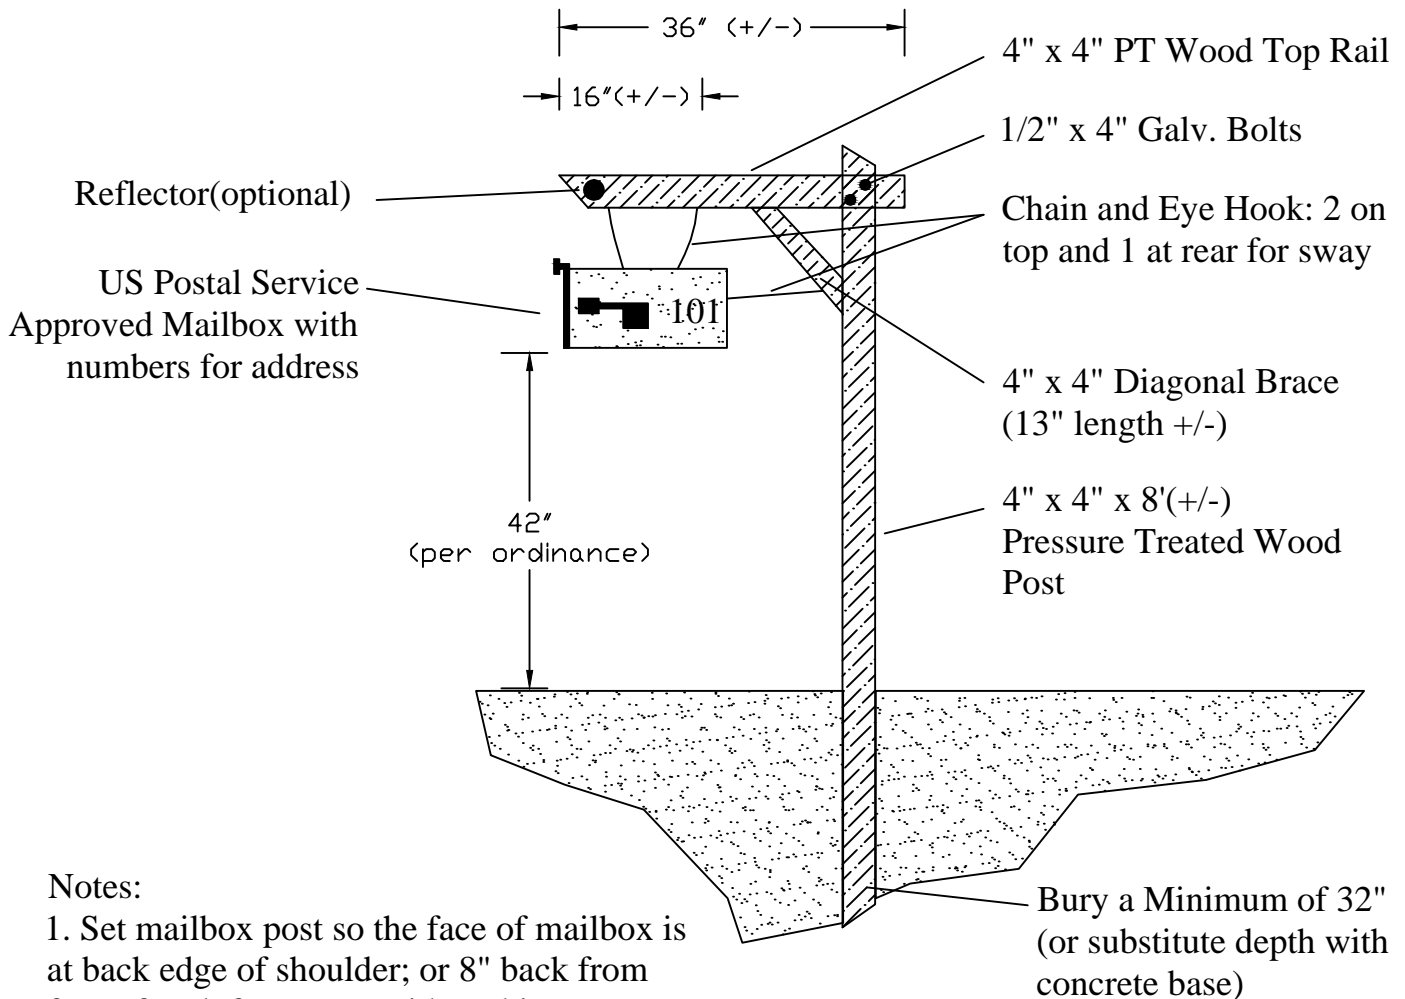

Notes:

1. Set mailbox post so the face of mailbox is at back edge of shoulder; or 8" back from face of curb for streets with curbing.
2. Cut notch in post and top rail to form cross-halving joint, then bolt 2 pieces together.
3. Seal mailbox/hooks with silicone or rubber washers